



HESTORE.HU

elektronikai alkatrész áruház

EN: This Datasheet is presented by the manufacturer.

Please visit our website for pricing and availability at www.hestore.hu.


C-2 *cyklop*




**UNIVERSAL CENTRAL
LOCKING CONTROL UNIT**

MANUAL


1. LOCK:

Press the lock button  on the remote control, the lights will blink once, and the door will lock. The LED will start blinking


2. UNLOCK:

Press the unlock button  on the remote control, the lights will blink twice and the door will unlock. The LED will stop blinking.


3. ROLLING UP WINDOWS (COMFORT FUNCTION):

After pressing the lock button  on the remote control, a 25-second pulse for rolling up windows will appear at the “comfort” output.

4. FINDING YOUR CAR IN A PARKING LOT

When the car is locked, press the lock button  on the remote control once. The lights will start blinking for 30 seconds to help you find your car. Pressing the same button once again stops this function.

5. ADDITIONAL CHANNEL (OPENING THE CAR BOOT)

Press and hold the unlock button  for 2 seconds. A pulse for controlling the car boot will appear at the output of the additional channel.

6. SETTING THE ELECTRIC/PNEUMATIC LOCK

(using a jumper)

J3: set in position 2. 0.5-second pulses for an electric lock.

J3: set in position 1. 3.5-second pulses for a pneumatic lock.

7. PAIRING REMOTE CONTROLS


You can pair up to 6 remote controls with the controller.

Press once the switch located on the control unit central board, accessible from the side opening of the housing. The hazard warning lights will switch on. Next, press one of the buttons on the remote control you want to pair and the hazard warning lights will switch off. The pairing procedure is now finished. To pair another remote control device, repeat the procedure.


8. UNPAIRING REMOTE CONTROLS

Press and hold for 3 seconds the switch located on the control unit central board, accessible from the side opening of the housing. The hazard warning lights will blink 5 times. All remote controls are now unpaired.


Central locking unit – connection diagram

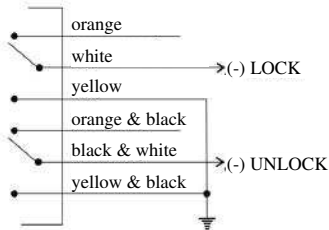


CONTROLLING THE „GROUND” (GND) CONNECTION

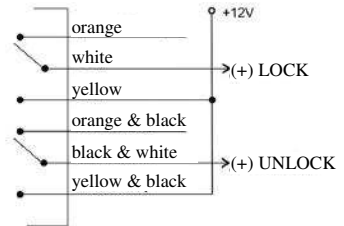

CONTROLLING THE „POSITIVE” (+) CONNECTION

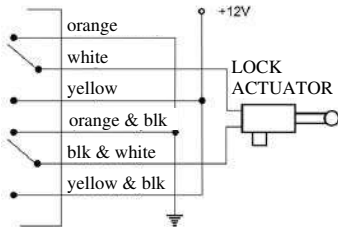


CONTROLLING THE ACTUATOR (+/-)

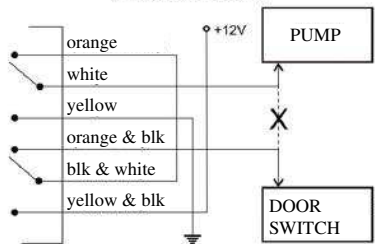

CONTROLLING THE PNEUMATIC LOCK

connection diagram

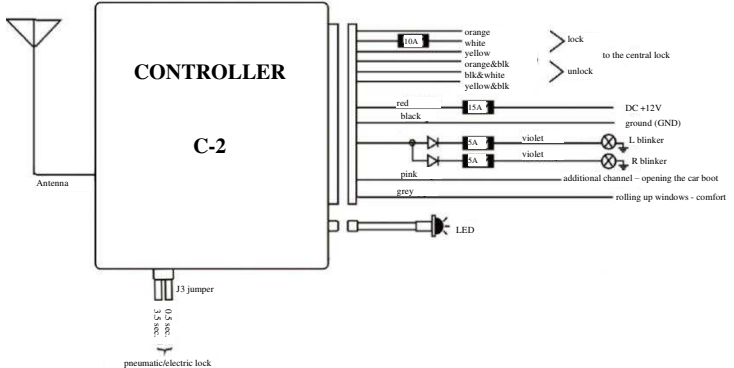

WARRANTY

The importer provides a warranty for a period of 12 months from the date of purchase and undertakes to repair the device free of charge if during this period defects occur due to the fault of the importer. The warranty does not cover the damage due to the fault of the importer. The defective device must be returned to the place of purchase clean and at one's own expense, together with this warranty, the purchase receipt or VAT invoice and a brief description of the damage. The cost of dismantling and assembling the device will be borne by the user.

IMPORTANT

This warranty does not cover: natural wear and tear of remote control housings, remote control batteries and all damages resulting from improper use, unauthorized modifications and repairs.

Local distributor:

Made in PRC

Specification:

Power supply voltage: DC 12V

Remote controls carrier frequency: 433.92 MHz

Max. load current at the outputs of the central locking unit: 10A

Max. load current at the output for rolling up windows: 150mA

Net weight: 0.30 kg

Operating temperature [-20 ... +40] °C



Environmental protection

This product must not be treated as household waste and therefore must not be disposed of with the household waste.