



HESTORE.HU

elektronikai alkatrész áruház


EN: This Datasheet is presented by the manufacturer.

Please visit our website for pricing and availability at www.hestore.hu.

Seeeduino XIAO Expansion board Manual:

<https://wiki.seeedstudio.com/Seeeduino-XIAO-Expansion-Board/>

Pinout

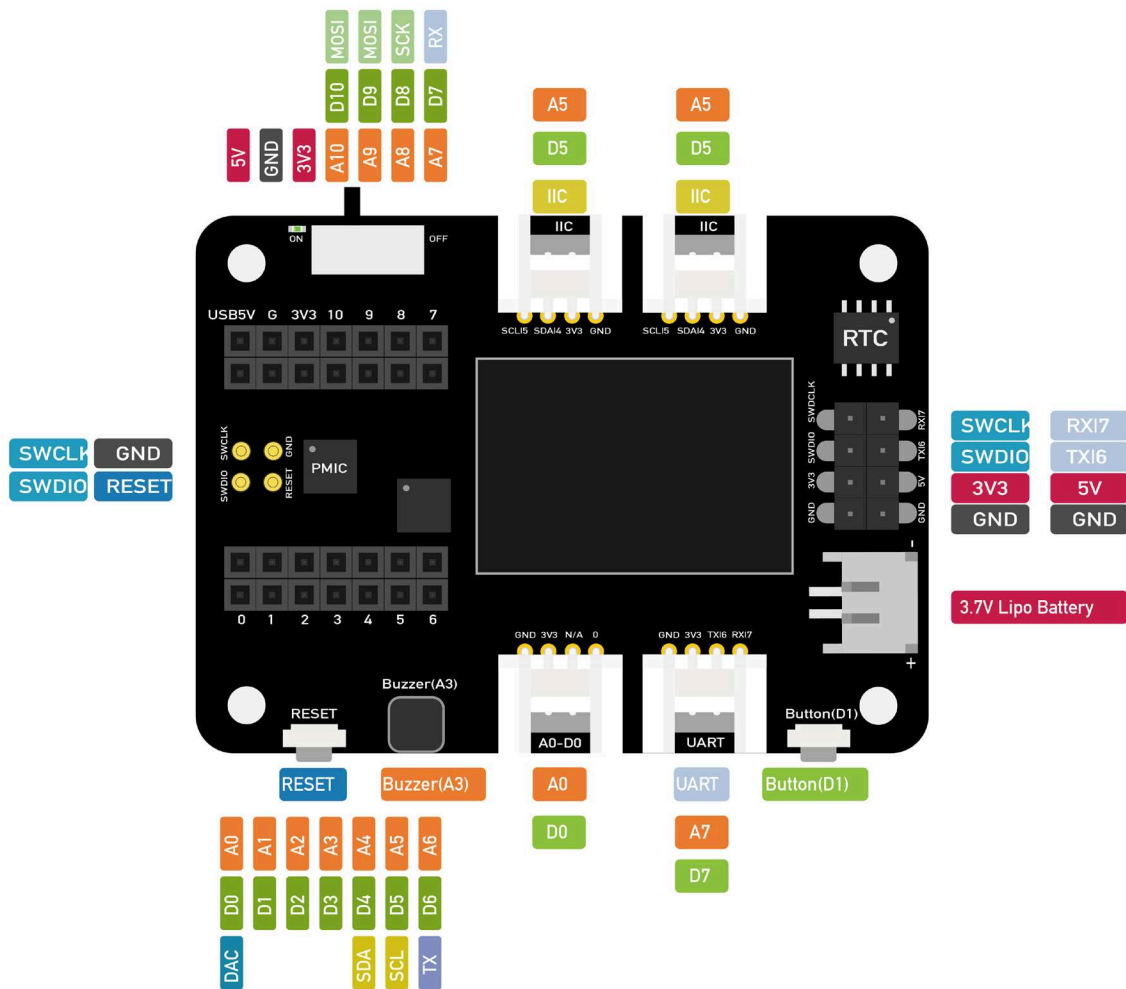

GPIO	0	1	2	3	4	5	6	7	8	9	10	SWCLK	SWDIO	RESET
Interface	A0、D0	D1	SPI	A3	IIC		UART		SPI			SWD		RESET
Components	Grove*1	User Button	mini SD	Buzzer	Grove*2		Grove*1、Headers		mini SD			Headers		Button