




HESTORE.HU

elektronikai alkatrész áruház

EN: This Datasheet is presented by the manufacturer.


Please visit our website for pricing and availability at www.hestore.hu.

Pinout

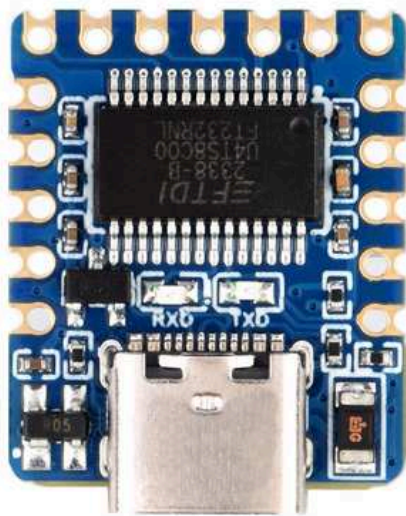

5V	5V output
GND	Ground
VCC	3.3V or 5V output, configured via the pads on the back
TXD	Connecting to MCU.RX (signal direction: MCU.RX << FT232 << PC.TX)
RXD	Connecting to MCU.TX (signal direction: MCU.TX >> FT232 >> PC.RX)
RTS	Connecting to MCU.CTS (signal direction: MCU.CTS << FT232 << PC.RTS)
CTS	Connecting to MCU.RTS (signal direction: MCU.RTS >> FT232 >> PC.CTS)

Dimensions

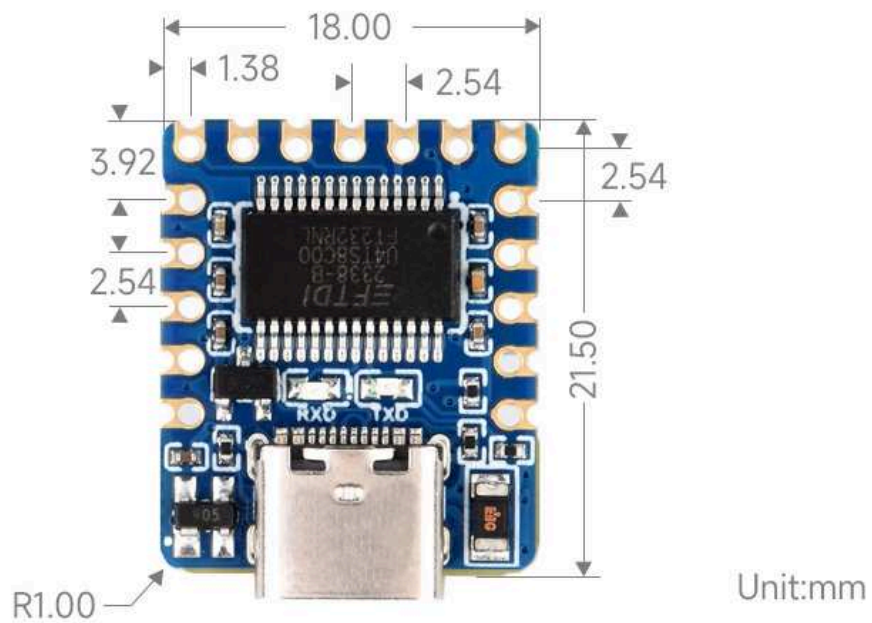

* measured manually and may have some errors.